
## **RRP COFS Tank Installation Guide.**

1. Install level guide to each of the tanks, Water level guide to right of the tank and Oil to the left. **Note:** Level sight tubes will need to be cut to length, to do this insert one end first ascertain correct length.



- 2. Install tanks to backing plate with 6 x M6 bolts provided, Oil on the Left and Water on the Right.
- 3. You will now need to remove the original washer bottle from the car, firstly disconnect the electrical connectors for;
  - a. Windshield Washer Motor
  - b. Headlight Cleaner Motor
  - c. Headlight Relay

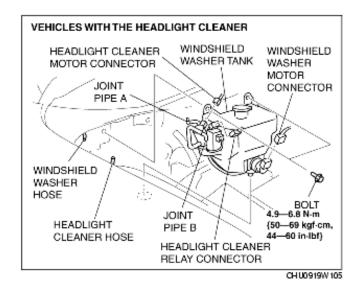

- 4. Disconnect the water hoses from the Windshield Washer Motor and Headlight Cleaner Motor and remove the 2 x M6 bolts to remove the washer tank from the car. (there may be some water spillage)
- 5. Remove the electrical components from the original washer bottle including the rubber seals and install into the new water tank. (Note: Do not push the Windshield washer motor all the way home but leave 2mm to allow room for the level switch at the bottom of the tank.) Washing up liquid can be used to lubricate the sensors and rubber seals for easier installation.



- 6. The Headlight cleaner motor should be secured using the supplied tie wraps and tie wrap mount.
- 7. The new tank solution can now be installed in the car, a longer bolt has been provided for the backing plate. Water hoses will need to be cut to length and slightly re-routed to meet the motors in their new positions.
- 8. For COFS adapter installation, please see the COFS adapter installation guide.